


# Axe & Tool Sharpener

## Model 21800

### INSTRUCTIONS:

There are two sharpening blades in the Axe & Tool Sharpener. **Blade #1** is designed to sharpen axes and pulaskis and **Blade #2** to sharpen large garden shears & tools, shovels, lawn mower blades, hoes, and other tools that require sharpening on one side only. See Photo #1

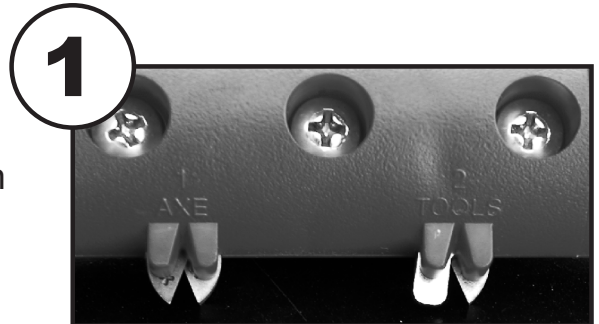


Blade #1

Blade #2

### To Sharpen Axes:

Secure axe in a vise or on a firm surface with edge to be sharpened facing up. Hold the sharpener with two hands (screws facing toward you) and place Blade #1 on the axe blade so that the blade of the axe is between the “V” formed by the two tungsten carbide blades (See Photo #2). Press down firmly and pull the sharpener toward you along the length of the axe blade. Usually 3 or 4 strokes is sufficient.

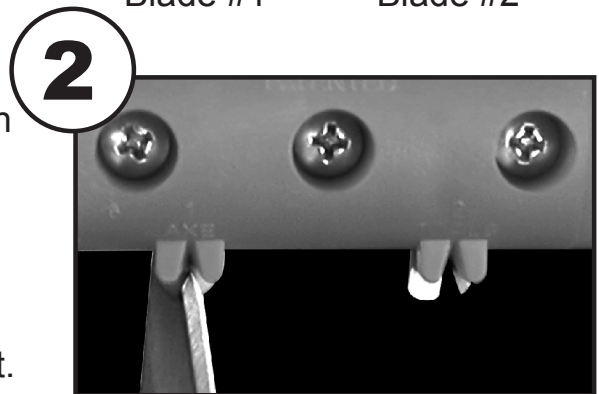

To Sharpen Axes

### To Sharpen Garden Tools:

Secure tool to be sharpened in a vise or on a firm surface with edge to be sharpened facing up. Hold the sharpener with two hands (screws facing toward you) and place Blade #2 on the edge to be sharpened (See Photo #3). Position the carbide insert, which has a “-” sign, against the edge to be sharpened. Press down firmly and pull the sharpener toward you, from one end of the tool blade to the other. Usually 3 or 4 strokes is sufficient. For power equipment remove blades prior to sharpening and secure in a vise.

